

## Self-Recovery Winch

## Model: **DV-6000S**

PN: 854756 12V DC

856129 24V DC

## **Introduction**

Ì	F	Δ	2	tı	ī	r	Δ
ı		H	a	н	1	I (	-

Line pull: 2,722 kg / 6,000 lb wire rope first layer

Wire rope: 7.1 mm  $\times$  24.4 m (9/32"  $\times$  80') galvanized aircraft A7  $\times$  19

Brake: Patented cone brake holds full load

Clutch: Turn the T-handle for rapid wire rope payout Control: Handheld pendant switch powers the winch

#### Unpacking

Winch assembly	1 pc
Detachable control box	1 pc
Remote control	1 pc
Wire rope with hook	1 pc
Roller fairlead	1 pc
• 1.8 m ( 6' ) 6 gauge battery leads	1 pc

#### ► Read this manual carefully

You should carefully read and understand this manual before operating it. Careless winch operation may result in personal injury hazards or property damage.

## ► Information requesting or parts ordering

Please specify the followings information:

Winch PNSerial number

Part description
Replacement part number

· Quantity for each part

## **Installation**

Before using the winch, make sure all electrical components have no corrosion or damaged; the environment should be clear and dry.


#### Winch and roller fairlead mountings

 It is very important that the winch will be mounted on a flat and hard surface of mounting channel in order to make sure the motor, drum and gearbox housing are aligned correctly.

- · Roller fairlead does not mount to winch directly.
- The wire rope shall be wound in an under-wound orientation only.
- Four (4) M10 x 1.50 pitch 8.8 grade high tensile steel bolts must be used in order to sustain the loads imposed on the winch mounting.
- Two (2) M12 x 1.75 pitch 8.8 grade high tensile steel bolts must be used for fastening the roller fairlead into the mounting channel.


### ▶ Wiring Diagram

Attach the black lead firmly to the negative (–) battery terminal and red lead to the positive (+) battery terminal. The voltage drop for the winch motor must not exceed 10% of the nominal voltage of 12/24V DC.

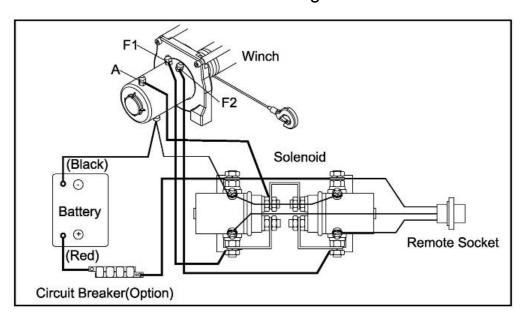

#### ► Nut fastening for motor & contactor

- 1. Holding the lower nut on the stub and fastening the upper nut clockwise.
- 2. The torque setting for nut is 14 N-m/124 lb-in.

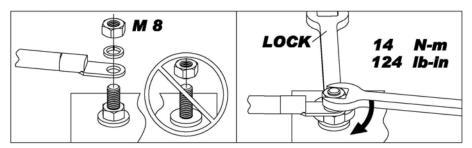

### Warning

- The winch is not intended to be used in any manner for the movement or lifting of personnel.
- The rated line pull shown is based on the first layer of rope on the drum.
- The rope winding on the drum shall remain 5 wraps from the drum.

# **Parts List**

Ver:12

Item No.	Description	Part No.	Qty	
1	Motor 12V	881505	1	
'	Motor 24V	881506	] '	
2	Tie bar kit	880076	2	
3	Motor support rack	880077	1	
4	Motor coupling	880078	1	
5	Drum bushing	880006	1	
6	Drum kit	880080	1	
7	Drum bushing B	880081	1	
8	Gearbox support rack	880082	1	
9	Wire rope w/hook	880083	1	
10	1 <sup>st</sup> shaft	880084	1	
11	Grounding lead	880085	1	
12	3 <sup>rd</sup> ring gear kit	880086	1	
13	2 <sup>nd</sup> stage carrier	880087	1	
14	1 <sup>st</sup> stage carrier	880088	1	
15	Retaining ring	880089	1	
16	1 <sup>st</sup> & 2 <sup>nd</sup> ring gear	880090	1	
17	1 <sup>st</sup> pinion kit	880091	1	
18	Clutch kit	880092	1	
19	Gear box kit	880093	1	
20	Cone brake disc kit	880094	1	
21	Brake clutch base	881099	1	
22	Brake cover kit	880095	1	
23	Roller fairlead WA-0508	880096	1	
24	Mounting hardware	880097	1	
25	Remote control WA-0310	880025	1	
26	Handsaver strap	880026	1	
27	Detachable control box 12V	880098	1	
<u> </u>	Detachable control box 24V	880099		
27-1	Remote socket kit	881289	1	
27-2	Detachable control pack 12V	881446	1	
21-2	Detachable control pack 24V	881447		
28	Handle kit	880103	1	

# **Winch Assembly**

